

How to install signs

Car Park signs can be installed using 3 methods...

Adhesive:


1. Install in dry weather only
2. Using the Stanley knife, open the nozzle of the sealant, silicon or adhesive tube.
3. Load the tube into the Application Gun
4. On the back of each sign, apply a 1-2 squeezes in each corner.
5. Press the sign firmly in place on the wall, applying pressure in each corner.
6. Allow to dry for 2-4 hrs

You will need:

1x Tube of Sealant, Silicon or Adhesive (available from any DIY store)

1x Application Gun

1x Stanley Knife

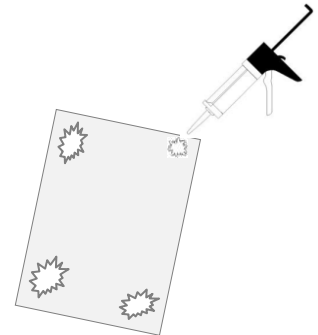

suitable for most walls

Screws:

1. Place your screw through a suitable washer
2. Using a screwdriver, screw the screws partially into the sign.
3. Place the sign against the wall/fence and screw fully into place.

You will need:

4x Screws

4x Washers

1x Screwdriver



suitable for wooden fences


Cable Ties:

1. Using a screwdriver, pierce two holes at the top and bottom of the sign.
2. Ensure the two holes are 'post width' apart.
3. Feed the cable-tie through hole number 1, from the back to the front
4. Bring the cable-tie back through hole number 2, this time from front to the back.
5. With both cable-tie ends at the back of the sign, fasten around your chosen post
6. Repeat this for the 3rd and 4th holes.

You will need:

2x Cable-Ties

1x Screwdriver

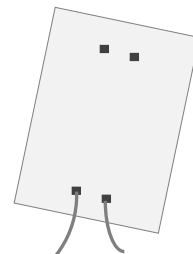

suitable for posts / gates / wire fences